

The example below demonstrates how to print an index of photos and then a Borderless photo on 10 × 15 cm EPSON Premium Glossy Photo Paper.
For more detailed information, refer to the *Standalone Operation Guide*.


Notes
Notes contain important information and useful tips on the operation of your printer.

EPSON


1 Printing an Index

Print an index of photos.


1. Insert the memory card containing your photos into the appropriate memory card slot.

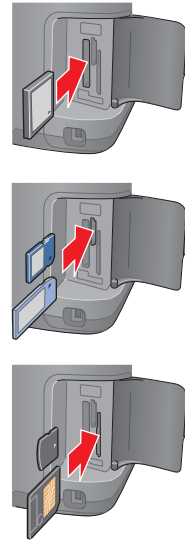

2. Load 10 × 15 cm size Premium Glossy Photo Paper into the sheet feeder.

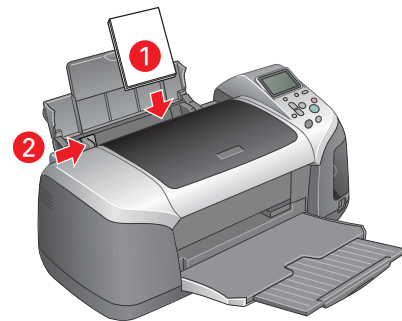

3. Make sure that **Basic Mode** is selected (the Basic Mode light is flashing).

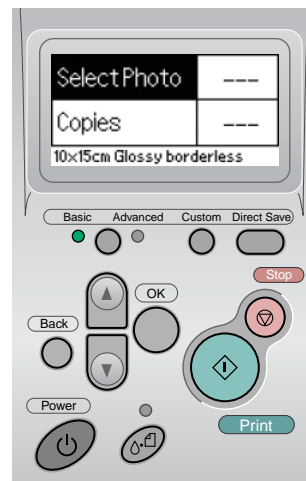

If Advanced Mode is selected, press the **Basic/Advanced mode switch** button, then press the **OK** button to select **Basic Mode**.


Note:
When **Basic Mode** is selected, the **Paper Type**, **Paper Size** and **Layout** settings are automatically set to **Premium Glossy Photo Paper**, **10 × 15 cm** and **Borderless**.

When **Index** is selected, **Layout** is automatically set to **index**.

4. Make sure **Select Photo** is highlighted, then press the **OK** button to open the menu.




Press the **▲** button to highlight **Index**, then press the **OK** button.

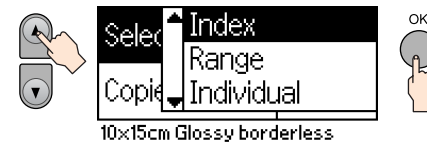


5. Make sure that 1 each is indicated as the **Copies** setting.



6. Press the **◊ Print** button to print the Index.

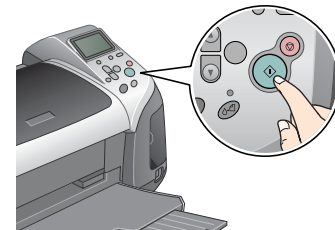

7. Look at the index and choose the photo you want to print.
The photo number will be entered as the **Select Photo** setting in the following procedure.

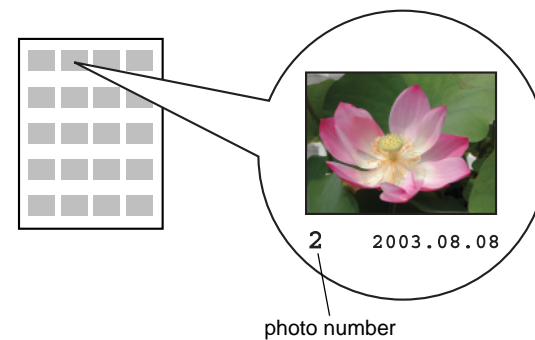


2 Printing a Photo

Print a photo selected from the index.

1. Press the **▲** button to highlight **Select Photo**, then press the **OK** button.




2. Press the **▲** button to specify the photo number that you have selected from the index, then press the **OK** button.

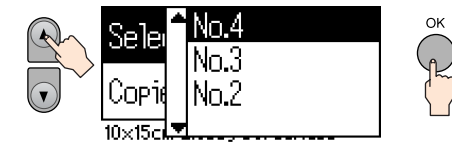

3. Make sure that 1 each is indicated as the **Copies** setting.



4. Press the **◊ Print** button to print the photo.

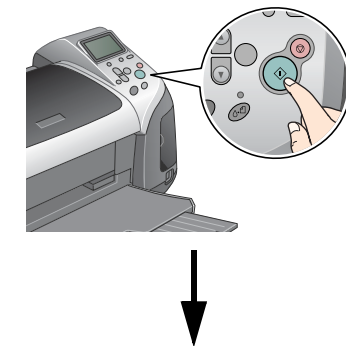


Summary of Panel Setting

Refer to the Standalone Operation Guide for more details.

Basic Mode



<Basic Mode is selected>

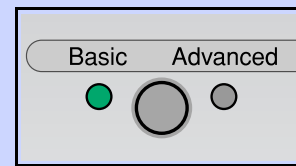

Select Photo	
All	Print all photographs on the memory cards.
Index	Print an index of all photographs on the memory card.
Range	Print a range of Photographs on the memory card.
DPOF	This option is automatically displayed when a memory card contains data whose printing instruction is set with a DPOF-compatible digital camera. Even if DPOF is selected, DPOF does not work when a memory card does not contain data set by DPOF.
P.I.F.Index	Print an index of the Print Image Frammer frames stored in the memory card.
Photo Numbers	Print a single, selected photograph from the memory card.
Individual	Print selected photographs from the memory card.

Advanced Mode

<Advanced Mode is selected>

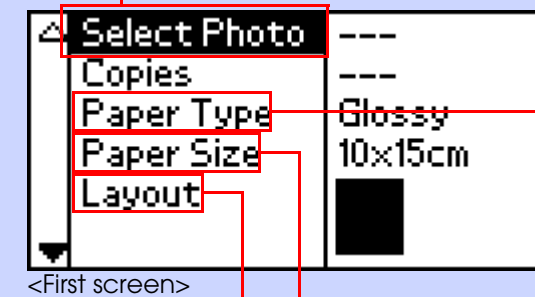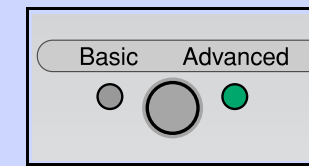


<First screen>

Paper Type	
Glossy	
Photo	
Matte	
Plain	
ColorLife	
Iron-on	

Paper Size	
10 x 15 cm	
A4	


Layout	
	Borderless
	Single
	Upper half
	Double
	Quarter
	Octet
	20
	Index
	Jewel Case-Borderless
	Jewel Case-Index

CD/DVD

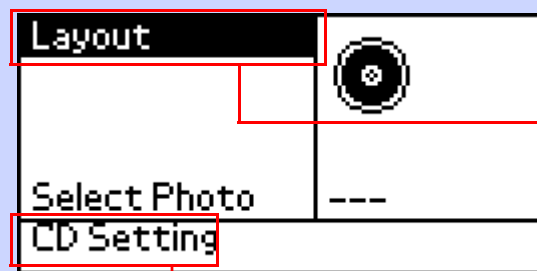

Layout	
	CD-1 picture
	CD-4 picture
	CD-12 picture

CD Setting	
CD/DVD Position :Up/Down	
CD/DVD Position :Left/Right	
Color Density	

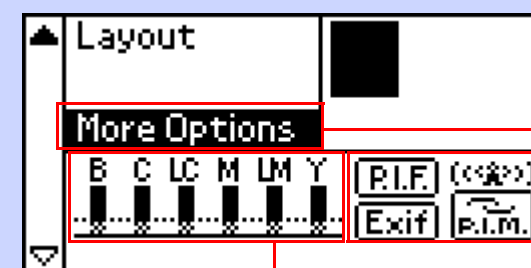

<Second screen>

Ink icon	Indicates the amount of the ink remaining
----------	---

P.I.F./ P.I.M/ Exif icon	Appears when the memory card contains data of these types.
	Appears when communicating with Bluetooth technology.

More Options	
Photo Number	Inkcartridge Replacement
Zoom	Head Cleaning
Filter	Nozzle Check
Automatic Correction	Paper Feed/Paper Eject
Small Image Enhancer	Print Head Alignment
Contrast	LCD contrast
Brightness	Memory Card Overwrite
Saturation	Platen Gap
Sharpness	Language
Date	BT Device Name Setting
Time	BT Communication Mode
Photo Information	BT Encryption
Fit to Frame	BT Passkey Setting
Quality	BT Device Address
Bidirectional Printing	